

Etsilon



Digital Ammeter AM901 / AM902 / AM903

Features

- ▶ 1 phase 2 wire systems
- ▶ Accuracy of $\pm 0.5\%$ of F.S.
- ▶ Panel mount
- ▶ Auxiliary supply of 240V AC $\pm 20\%$, 50/60 Hz

INDEX

CONTENTS

Page No.

A) SAFETY

SAFETY PRECAUTIONS.....	03
WIRING GUIDELINES.....	03
INSTALLATION GUIDELINES.....	03
MECHANICAL INSTALLATION.....	03

B) SPECIFICATIONS.....04

C) ORDERING INFORMATION.....04

D) INSTALLATION & MOUNTING

INSTALLATION.....	05
PANEL CUTOUT DIMENSION (in mm).....	05
MOUNTING.....	05
DEMOUNTING.....	06

E) TERMINAL CONNECTIONS.....06

F) WIRING DIAGRAM.....06

A) SAFETY

SAFETY PRECAUTIONS

All safety related modifications, symbols and instructions that appear in this operating manual or on the equipment must be strictly followed to ensure the safety of the operating personnel as well as the instrument.

If the equipment is not handled in a manner specified by the manufacturer it might impair the protection provided by the equipment.

- Do not use the equipment if there is any mechanical damage.
- Ensure that the equipment is supplied with correct voltage.

CAUTION :

1. Read complete instructions prior to installation and operation of the unit.
2. Risk of electric shock.
3. The equipment in its installed state must not come in close proximity to any heating sources, oils, steam, caustic vapors or other unwanted process by products.

WIRING GUIDELINES

WARNING :

1. To prevent the risk of electric shock, power supply to the equipment must be kept OFF while doing the wiring arrangement.
2. Wiring shall be done strictly according to the terminal layout. Confirm that all connections are correct.
3. Use lugged terminals.
4. To reduce electromagnetic interference use of wires with adequate ratings and twists of the same in equal size shall be made with shortest connections.
5. Layout of connecting cables shall be away from any internal EMI source.
6. Cable used for connection to power source, must have a cross section of 0.5mm² to 2.5mm² (20 to 14AWG; 750 °C (min)). These wires shall have current carrying capacity of 7.5A.
7. Copper cable should be used (Stranded or Single core cable).
8. Before attempting work on device, ensure absence of voltages using appropriate voltage detection device.

INSTALLATION GUIDELINES

INSTALLATION GUIDELINES:

1. This equipment, being built-in-type, normally becomes a part of main control panel and in such case the terminals do not remain accessible to the end user after installation and internal wiring.
2. Conductors must not come in contact with the internal circuitry of the equipment or else it may lead to a safety hazard that may in turn endanger life or cause electrical shock to the operator.
3. Circuit breaker or mains switch must be installed between power source and supply terminals to facilitate power 'ON' or 'OFF' function. However this switch or breaker must be installed in a convenient position normally accessible to the operator.
4. Before disconnecting the secondary of the external current transformer from the equipment, make sure that the current transformer is short circuited to avoid risk of electrical shock and injury.
5. The equipment shall not be installed in environmental conditions other than those mentioned in this manual.
6. The equipment does not have a built-in-type fuse. Installation of external fuse of rating 275V AC/0.5Amp for electrical circuitry/ battery is highly recommended.

MECHANICAL INSTALLATION

For installing the meter:

1. Prepare the panel cutout with proper dimensions as shown below.
2. Push the meter into the panel cutout. Secure the meter in its place by pushing it into panel cutout.
3. For proper sealing, tighten the screws evenly with required torque. Terminal screw tightening torque: 0.68N-m to 0.79N-m (6.018In-Lb to 6.992In-Lb) Screw clamp tightening torque: 0.1N-m (0.885Lb-inch)

MAINTENANCE

1. The equipment should be cleaned regularly to avoid blockage of ventilating parts.
2. Clean the equipment with a clean dry or damp cloth. Do not use any cleaning agent other than water.

B) SPECIFICATIONS

DISPLAY

Description	1Ø digital ammeter
Display	4 digit 7 segment LED display
Display range	0 to 5760A
Input range	50mA to 5A AC
Input frequency	50/60 Hz
Max continuous input range	7A
Over range indication	"Or" for input > 7.2A
CT primary setting	5 to 4000 (programmable in steps)
CT secondary setting	5A fixed
Resolution	0.001, 0.01, 0.1, 1A (Depending up to CT primary setting)
Electrical connection	1Ø-2 wire
Supply voltage	240V AC (±20%), 50/60 Hz
Weight	AM901: 80gm AM902: 85gm AM903: 120gm
Accuracy	±0.5% of full scale
Measurement method	True RMS
Environmental conditions	Temperature: Operating: -10 °C to 55 °C Storage: -20 °C to 75 °C Humidity: Up to 85% RH (Non-condensing) Altitude: Up to 2000 meters Pollution degree: II
Installation category	III (480V), II (600V)
Protection class	II
Mounting	Panel mounting
IP	IP51 (front) IP20 (back)

 
 
 
 
 
 
C) ORDERING INFORMATION

Product	Supply range
AM901	240V AC (±20%)
AM902	240V AC (±20%)
AM903	240V AC (±20%)
ACC SELFLOCK CLAMP + SCREW	Set of 2 (Available on request)

D) INSTALLATION & MOUNTING


INSTALLATION

For mounting and demounting of the meter, prepare the panel cutout with proper dimension as per below:

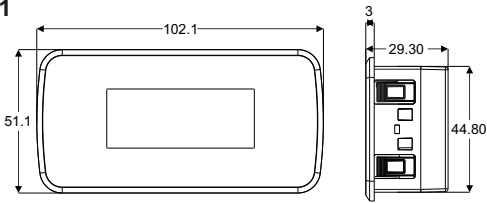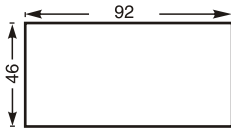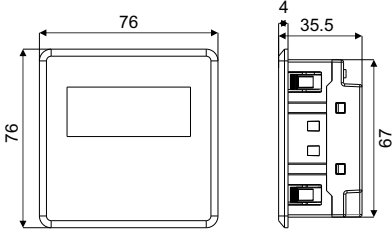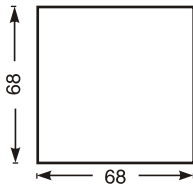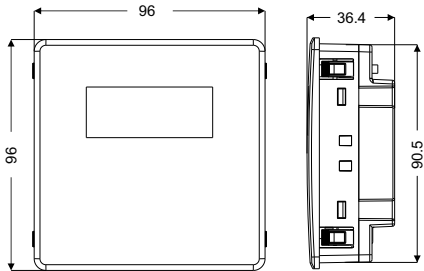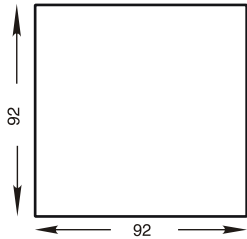Outline Dimensions (in mm)	PANEL CUTOUT DIMENSION (in mm)
AM901 	AM901 
AM902 	AM902 
AM903 	AM903 

MOUNTING

 
1. Insert meter into panel & ensure self lock clamps are fit.

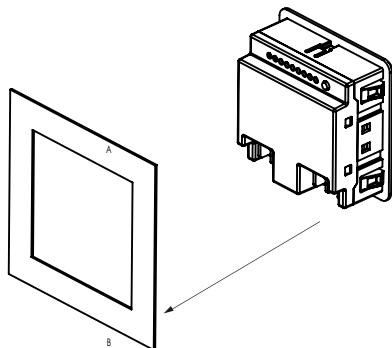



If the panel thickness is greater than 1.2mm and less than 5mm, use clamps.

2. Fix the clamp into slot and pull up to lock the clamp. (Ensure that clamp are locked properly)

 Assemble the clamp (as shown in fig) in their respective slot.

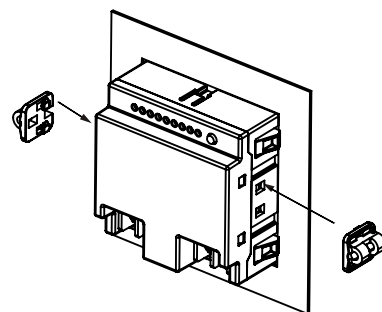


  3. Tight the screws as per shown in figure.

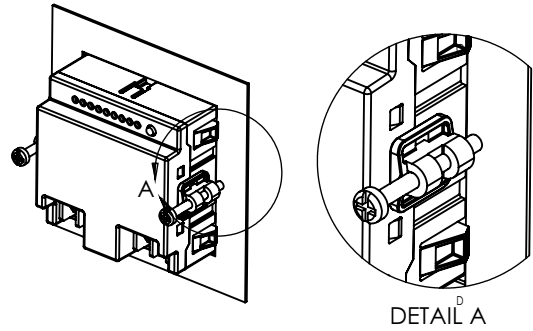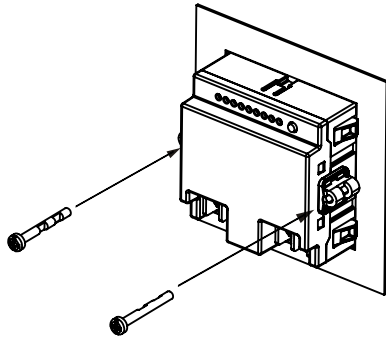


DEMOUNTING

 
1. Remove the screw from clamp as shown in fig.

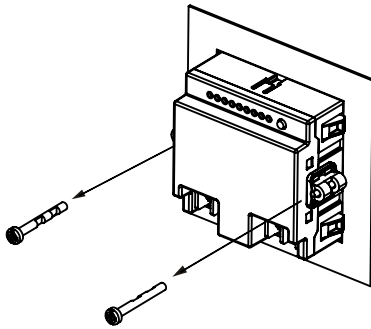

 
2. Pull down the clamp towards the FR bezel and remove clamp.

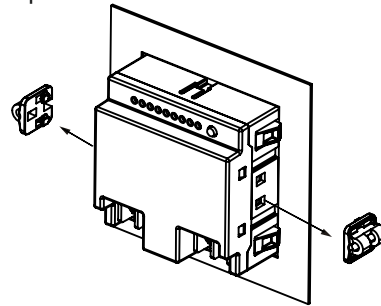

 3. Remove meter from panel.

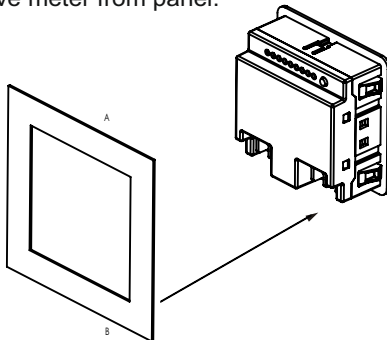


 F) WIRING DIAGRAM

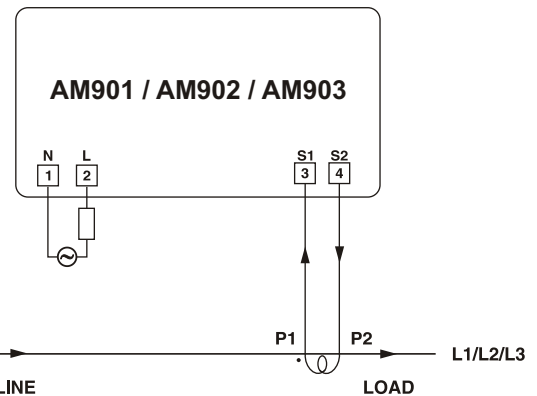

E) TERMINAL CONNECTIONS

 AM901 / AM902 / AM903

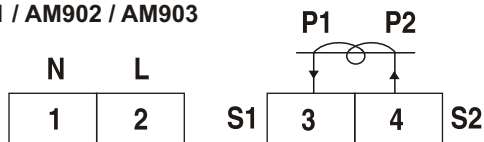

Clamps are available on request

All fuse types : 0.5A class CC UL type ;
0.5A fast acting 600V

Etsilon

Factory Address : EL-27/1, Electronic Zone, TTC Industrial Area, MIDC, Mahape, Navi Mumbai - 400710, India.

Website : www.etsilon.com | **Customer Care No.** 7304413724 | **Email :** support@etsilon.com

For Service : Tel. No. : 9136977317 | **Email :** service@etsilon.com