DIN rail mounting switching mode power supply

Features

- DIN rail type and fixing screw type mountings
- Built-in overcurrent protection, output short circuit protection, overheat and over voltage limit protection circuit (SPB-120)
- Built-in power factor correction circuit(SPB-120/240)
- Low-voltage LED indicator
- Slim-type size (SPB-060: W36×H100×L110mm)
- Minimizes noise and ripple
- · Improves user safety with terminal cover
- Designed to minimize heat

manual before using.

- Output power : 60W, 120W, 240W
- Output voltage: 12VDC, 24VDC, 48VDC

Please read "Caution for your safety" in operation



Series



NEW

SPB-060 SPB-120 Series

SPB-240 Series

Ordering information						
SPB – 060 – 24						
	12	12VDC				
Output voltage	24	24VDC				
	48	48VDC				
	060	60W				
Output power	120	120W				
	240	240W				
Item	SPB	Switching Mode Power Supply				

Over-heating protection

If the inner temperature of the switching element is around 140°C by overheat, it stops switching operation and becomes open state. Output voltage is not output.

Specifications

Mo	odel	SPB-060-12	SPB-060-24	SPB-120-24	SPB-240-12	SPB-240-24	SPB-240-48	
Output power		60W		120W	240W			
	Voltage	100-240VAC(85-264VAC)						
Input	Frequency	50/60Hz						
	Efficiency ^{*1}	Min. 75%		Min. 80%	Min. 86%	Min. 88%		
	Power factor ^{*1}	—		Min. 0.9				
	Current consumption ^{*1}	Max. 1.6A		Max. 1.9A	Max. 3.8A			
Po	wer factor correction circuit	<u> </u>		Built-in				
Out	Voltage	12VDC	24VDC		12VDC	24VDC	48VDC	
	Current	5A	2.5A	5A	20A	10A	5A	
	Voltage adjustment range ^{**2}	Max. ±5%						
	Input variation ^{**3}	Max. ±0.5%						
Output	Load variation ^{*1}	Max. ±1%			Max. ±1.5%			
	Ripple ^{*1}	Max. ±1%			Max. ±3%	Max. 1.5%	Max. ±1%	
	Start-up time ^{*1}	Max. 600ms Max. 1000ms						
	Hold time ^{*1}	Min. 10ms			Min. 20ms			
_	Inrush current protection	Max. 25A (100VAC), Max. 40A(240VAC)			Max. 50A(100VAC), Max. 50A(240VAC)			
Ъ	Output over current protection ^{#4}	Min. 105%						
Protection	Output over voltage protection				16.0V ±10%	30.0V ±10%	58.0V ±10%	
	Output short-circuit protection	Max. 10ms						
_	Output low-voltage indicate	9.6V±10%	20.0V±10%		10.0V±10%	20.0V±10%	43.0V±10%	
Οι	Itput indicator	Green LED						

%1: It is for the rated input voltage 100-240VAC, and 100% load.

%2: Adjusting voltage by the output adjuster (V.ADJ), it is changed the below voltage adjustment range(±5%).

X3: It is for the rated input voltage 100-240VAC(85-264VAC), and 100% load.

※4: It is for the rated input voltage 100-240VAC

DIN rail Mounting Type Switching Mode Power Supply


Specifications

<u> </u>	ecificatio	ns						(A) Photo electric
Model		SPB-060-12	SPB-060-24	SPB-120-24	SPB-240-12	SPB-240-24	SPB-240-48	sensor
Insulation resistance Min. 100MΩ(at 500VDC megger between all input terminals and output terminals)							(B)	
Dielectric strength		3000VAC 50/60Hz for 1 min. (between all input terminals and output terminals)						Fiber optic sensor
		1500VAC 50/60Hz for 1 min. (between all input terminals and F.G.)						
Vibration 0.75mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each of X, Y, Z directions for 2 hour						(C)		
Shock		300m/s ² (approx. 30G) in each of X, Y, Z directions for 3 times						Door/Area sensor
EMS	EMS Conforms to EN61000-6-2							
EMI	EMI Conforms to EN61000-6-4					(D) Proximity		
Safety		IEC60950, IEC50178						sensor
Environ-	Ambient temperature	-10 to 50°C, storage: -25 to 65°C						(E)
ment	Ambient humidity	25 to 85%RH, storage: 25 to 90%RH						Pressure sensor
Protection		IP20(IEC standard)						
Unit weight ^{≋₅}		Approx. 347g(ap	oprox. 274g)	Approx. 570g (approx. 466g)	Approx. 866g(a	pprox. 736g)		(F) Rotary encoder

%5: The weight is with packaging and the weight in parentheses is only unit weight.

*Environment is rated at no freezing or condensation.

Output deterating curve by ambient temperature

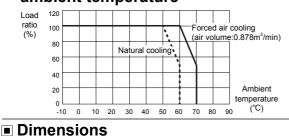


Recommended power input voltage wire for model

Recommended power input voltage wire	AWG21-19	AWG18-16		
Model	SPB-060-12 SPB-060-24 SPB-120-24	SPB-240-12 SPB-240-24 SPB-240-48		

 SPB-240 Series SPB-060 Series SPB-120 Series 7-M3.5 5-M3.5 5-M3.5 When opening terminal cover ⇔ ⇔⊨ -066 ®⊕⊕é ÔĆ +V +V -V -V C B 6 35.4 117 132 132 125 110 001 15 115 ren f ON C 906 ÐOC ÐĐC X 2-Ø4.2 110 ŝ, 36 <u>2-Ø4.2</u> 2-Ø4.2 50 80 XSide sizes are same as


Part descriptions

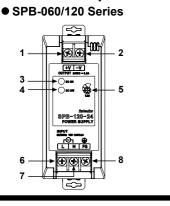


1. Output power [+V] terminal

SPB-060/120 /240 Series

- 2. Output power [-V] terminal
- 3. Output(DC ON) indicator(green)
- 4. Output low voltage (DC LOW) indicator(red)
- 5. Output voltage adjuster(V.ADJ)
- 6. Input power [L] terminal
- 7. Input power [N] terminal
- 8. Frame ground [F.G.] terminal



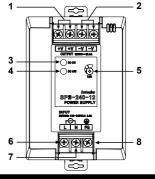

(unit: mm)

(M) Tacho/ Speed/ Pulse meter

(G) Connector/ Socket

(H) Temp. controller

(I) SSR/

Power controller

(J) Counter

(K) Timer

(L) Panel meter

(N) Display unit (O) Sensor controlle

(P)

(Q) Stepper

motor& Driver&Co (R) Graphic/ Logic panel

(S) Field network device

(T) Software




Autonics

Installation

- DIN rail mounting
- To mount the power supply on the rail,


First put the power supply on the part a of the rail and then press it for the direction b.

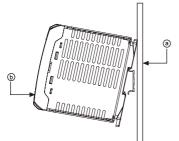

O Panel mounting

• When there is no rail

This power supply has two hooks. If pushing these at the arrows direction as below figure, you can mount this power supply with general bolts.

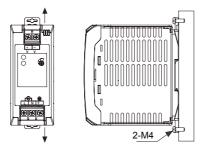

Caution for using


- Caution for operating
- This product does not have the function for parallel or series operation.
- The output current must be used within the rated specification.
- If over current is applied to the product, over current protection is operating. It causes shorten the life cycle of the product.
- The output voltage must be used within the rated output specification.
- For the product, which has the control function for over-voltage, if making the output voltage adjuster(V.ADJ) to over rated voltage, the function starts to work.
- This product has the function of over-heating protection. The over-heating protection operates when the product has over-heating condition. The product normally operates if the load is removed for over 5 minutes.
- In case of the SPB-060, it does not have the harmonics suppression and power factor improvement circuit. To improve harmonics suppression and power factor, install the additional device.
- In case of the SPB-060, it uses condenser rectification, and power factor is within 0.4 to 0.6 range. To use a cabinet panel or a electric transformer, select input power capacity of this product as below formula.

Input apparent power[VA] = $\frac{\text{Output active power[W]}}{\text{Power factor×Efficiency}}$

- This product is provided with a noise filter, but noise is variable according to operating conditions such as installation environment and wiring.
- When the inner fuse is damaged, replace the fuse of same specification.

• To remove the power supply on the rail

First put a screw driver into the part $\textcircled{\mbox{\scriptsize o}}$ and push it downward.

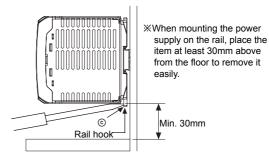


Autonics

Caution for using

- Caution for mounting
- Mount this product on the surface of metal panel vertically for the reliability.
- Please mount this product at a well-ventilated place in order to increase the heat radiation efficiency.
- Effective mounting
- Natural cooling mounting

When installing more than two power supplies, min. 20mm distance is required to radiate heat effectively. Assure min. 75mm distance of the upper or the lower product and mount the products as following figure. - Forced air cooling mounting

For effective heat radiation, assure min. 75mm distance of the upper and lower product to flow air as the below figure. Install a fan which min. air volume is 0.878m³/min within 50mm from the product to maintain the reliability of the product.

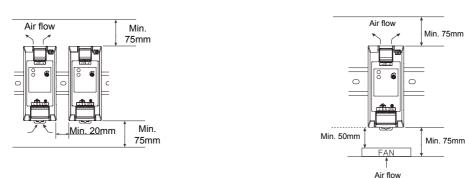

- Dielectric or insulation resistance test when this unit is installed in the control panel.
- Separate the unit completely from a control panel circuit.
- Short all terminals of the unit.
- Caution for connecting the input power terminal
- Connect input line (AC) to the input terminal correctly.
- When you connect this to the other terminal, it may cause damage to the power supply.
- Do not use this unit at below places.
- Place where there are severe vibration or impact.
- Place where strong alkalis or acids are used.
- Place where there is direct ray of the sun.
- Place where strong magnetic field or electric noise are generated.
- Installation environment
- It shall be used indoor
- Altitude max. 2000m
- Pollution Degree 2
- Installation Category II

(A) Photo electric sensor

(B) Fiber optic senso

(C) Door/Area

(D) Proximity

(E) Pressure

(F) Rotary encode

(G) Connector/ Socket

(H) Temp. controlle

(I) SSR/

> Power controller

(J) Counter

(K) Timer

(L) Panel

mete

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor controlle

(Q) Stepper motor& Driver&C

(R) Graphic/ Logic panel

(S) Field network device

(T) Software

(U) Other

sens

senso